ICM-ETHi

Inline Contamination Monitor
Ethernet Interface

User Guide

www.mpfiltri.co.uk

200.139-EN

1 Introduction

The ICM-ETHi provides a convenient solution for connecting the ICM to an ethernet network. It plugs in directly to the ICM using a pre-wired connector. It can be used with Lantronix software for network configuration.

The following functions are provided:

- Ethernet to RS485 adaptor using Lantronix drivers.
- DC input socket for ICM power.
- Pre-wired ICM connector on 3m flying lead.
- ICM signals brought out to user-accessible terminal block. This allows external alarms, PLCs or a start button to be easily connected.
- LED Indicators indicating Transmit (Tx) and Receive (Rx) data.

Figure 1

2 Installation

An overview is given here for when the customer will be using our LPA-View software. This involves the following steps:

1 Connection

- Connect ICM-ETHi to the ICM.
- Plug the ICM-ETHi cable into the ICM.
- Connect DC power supply, either using the DC connector provided or via the internal terminal block.
- Connect network cable between ICM-ETHi and customer network switch.
- Install the Device Installer software from the Software CD or from the following web address: http://ltxfaq.custhelp.com/app/answers/detail/a_id/644
- Navigate to the Device Installer via Program menu - Follow menu instructions.
- Identify and record the LAN address used by the device, e.g. 81.187.19.55
- Access the Internet explorer (enter the LAN address in the navigation bar, Press enter)
- Access the ''Serial Settings'' tab and configure with the following changes from the default (can ''reset to default settings'' first):

  Protocol
  RS485-2wire

  Flow Control
  None

  Baud Rate
  115200

Data Bits
8

Parity
Even

Stop Bits
1

- Scroll Down to the bottom of the window and click 'Ok'
- From the left hand options, click 'Apply Settings'
- Install the Com Port redirector software from the Software CD or from the following web address: http://ltxfaq.custhelp.com/app/answers/detail/a_id/928
- Navigate to the CPR Manager via Program menu and Open
- Add a new Com Port/ Add and Remove
- Select (tick) an unused Com Port, e.g. Com 3 and click 'Ok'
- Configure the Com Port being used - double click on COM port

  Host (use value recorded earlier e.g.81.187.19.55) TCP Port 10001
- Press the Save button - menu bar save settings
- Please Note: the following message may appear:

Hardware Installation
The software you are installing for this hardware:
Lantronix CPR Port
has not passed Windows Logo testing to verify its compatibility with Windows XP. (Tell me why this testing is important.)
Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the hardware vendor for software that has passed Windows Logo testing.
Continue Anyway
STOP Installation

Figure 1

- Click Continue Anyway on all warnings
- Access e.g. Com 3 test tab, click ’Open’ to prove connection to the Ethernet adapter
- Click ’Close’ and shut down CPR manager and Device installer
- The new COM port (e.g.COM 3) will now be available in LPA-View
- Install LPA-View as per the user guide.
- Open LPA-View, open remote control (7th button from left on toolbar)
- Choose relevant Com port and click ’Ok’

3 Lantronix Software Installation

We supply a version of the software on CD, or the latest version from the Lantronix web site can be used.

Run the CPR installer. This is a file with a name like ``setup_cpr_x86x64cd_4.3.0.0''. Accept the security warning and license.

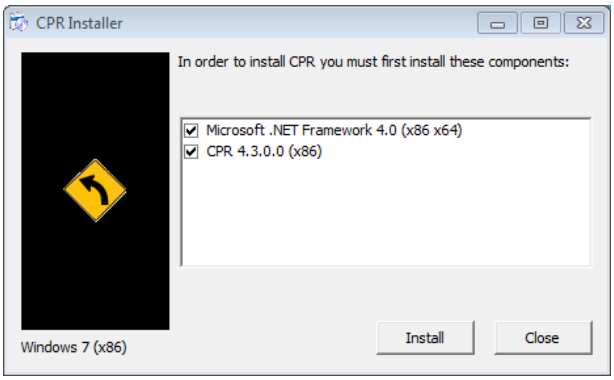

Figure 1 The ``CPR Installer''

The software requires the Microsoft .NET Framework. If you do not have this already, the installer will first install it for you. You will then need to restart the computer and run the installer again to install the actual CPR program. Follow the installation wizard accepting the defaults. You will need to accept another security warning in order to install the Com Port driver software.

4 Configuration

IP Address

In order to communicate on the network the ICM-ETHi requires an IP address. If you have a DHCP server on the network, this will happen automatically. Otherwise it is possible to assign one manually using the Lantronix Device Installer program (a separate free program available from the Lantronix web site).

Creating the Virtual Com Port

Connect up the ICM-ETHi as described above and apply power. When the unit is connected correctly you should see a continuous green LED to the left of the RJ45 socket after it has obtained an IP address.

Run the CPR program. Once started, press the Search button to search the network for ICM-ETHi devices. Any such are displayed on the bottom line as in the example below (with an appropriate IP address for your network).

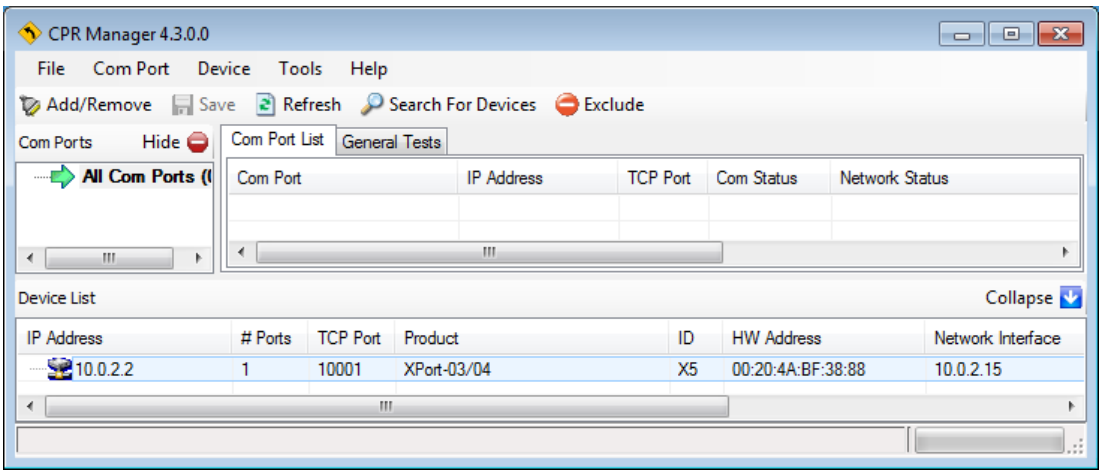

Figure 1 Searching the Network

Once the device is found, a COM port can be created to enable it to be accessed from LPA-View. Click the Add/Remove button to display the Com Ports dialogue (Figure 2).

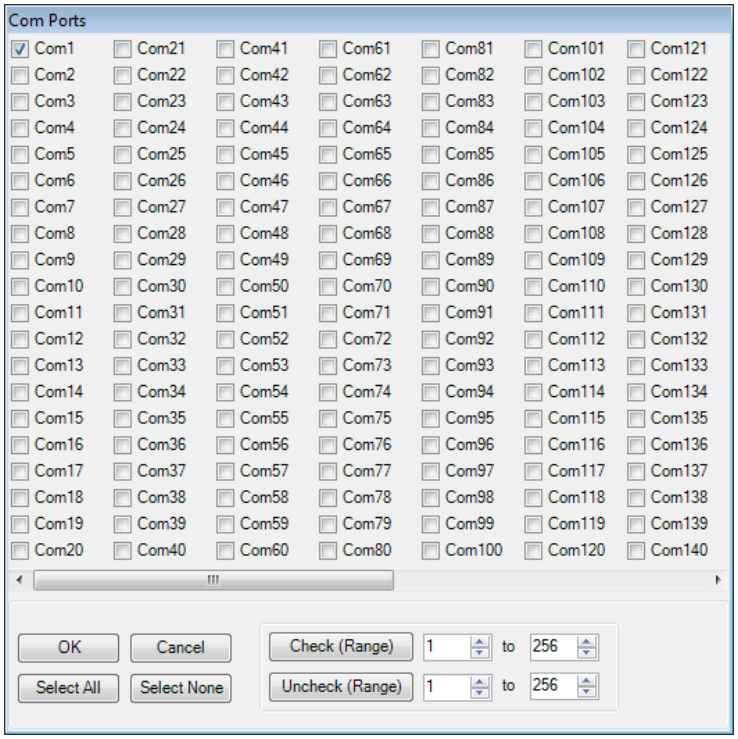
Com Ports
Com1 Com2 Com3 Com4 Com5 Com6 Com7 Com8 Com9 Com10 Com11 Com12 Com13 Com14 Com15 Com16 Com17 Com18 Com19 Com20
Com21 Com22 Com23 Com24 Com25 Com26 Com27 Com28 Com29 Com30 Com31 Com32 Com33 Com34 Com35 Com36 Com37 Com38 Com39 Com40
Com41 Com42 Com43 Com44 Com45 Com46 Com47 Com48 Com49 Com50 Com51 Com52 Com53 Com54 Com55 Com56 Com57 Com58 Com59 Com60
Com61 Com62 Com63 Com64 Com65 Com66 Com67 Com68 Com69 Com70 Com71 Com72 Com73 Com74 Com75 Com76 Com77 Com78 Com79 Com80
Com81 Com82 Com83 Com84 Com85 Com86 Com87 Com88 Com89 Com90 Com91 Com92 Com93 Com94 Com95 Com96 Com97 Com98 Com99 Com100
Com101 Com102 Com103 Com104 Com105 Com106 Com107 Com108 Com109 Com110 Com111 Com112 Com113 Com114 Com115 Com116 Com117 Com118 Com119 Com120
Com121 Com122 Com123 Com124 Com125 Com126 Com127 Com128 Com129 Com130 Com131 Com132 Com133 Com134 Com135 Com136 Com137 Com138 Com139 Com140
OK
Cancel
Select All
Select None
Check (Range)
1
to
256
Uncheck (Range)
1
to
256

Figure 2 Com Ports dialogue

Click on the desired Com port number (any can be used that do not conflict with existing allocations). Press OK to close the dialogue. The new Com port will be shown in the left hand pane, with the settings in red in the right hand pane.

As a shortcut, the settings can be filled in automatically. Click on the (New) Com port shown on the left hand pane in Figure 3. Then double-click the found device shown in the Device List at the bottom of the dialogue. Press the Save button to save the configuration.

Configuration Test

Network communications can be tested using the Tests tab as in Figure 4.

Press the Open button. If successful, the dialogue will show ``Com Status: Open''. Press Close afterwards otherwise the Com port will not be available to LPA-View.

After this configuration, the new ``COM'' port will be available to the LPA-View Test Analysis Software. Proceed to connect to the ICM as detailed in the main ICM manual.

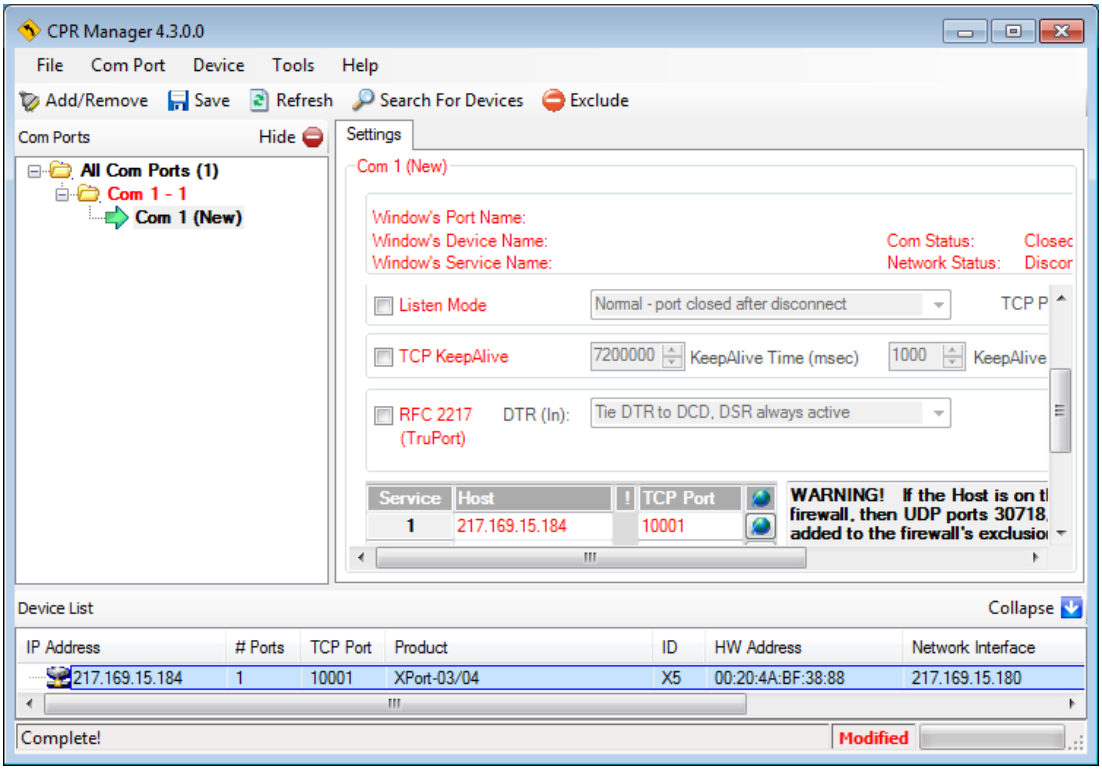

Figure 3 Com Port Settings

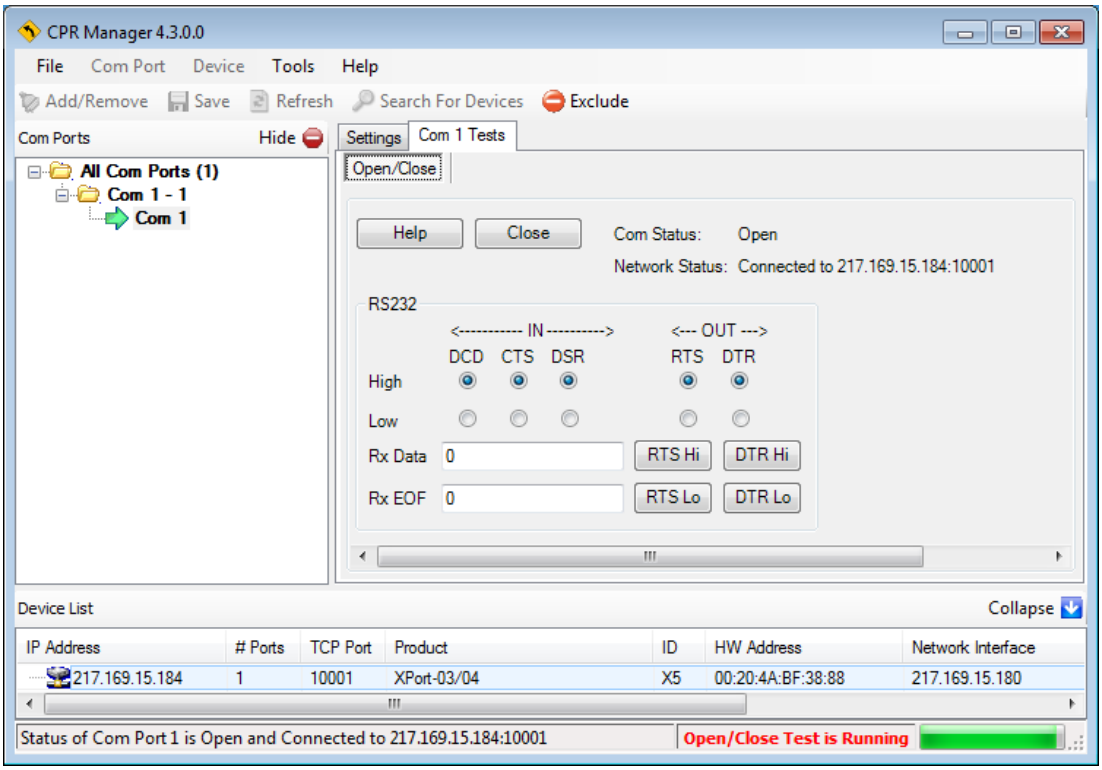

Figure 4 Testing

5 Wiring Options

The unit can be used as-is for simple PC control of an ICM.

However all the ICM signals are made available at a terminal strip within the interface, so that these can be connected to a customers equipment. These include a start signal and the two alarm outputs. Also included are the DC power input, customers may prefer to permanently connect an existing supply here rather than plugging in the provided DC adaptor. The RS485 signals (Data+, Data-) are also present - these may be connected to an existing Modbus network.

To access the terminal strip, remove the four screws holding on the right hand end-plate (the one with the ICM cable). The end-plate can then be detached and the top plate slid off. An additional cable gland (supplied) can be fitted in the spare position on the end-plate and used for customer wires. Some example arrangements are shown here, there is more information in the main ICM manual.

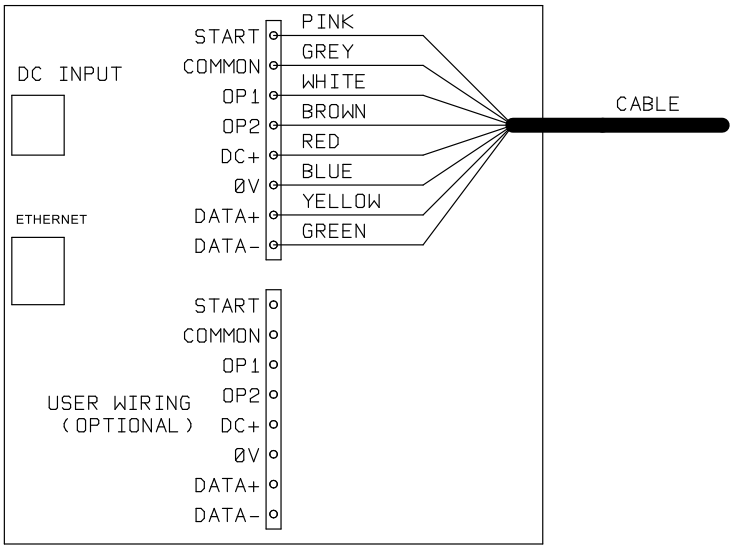

Figure 1 Pre-wired ICM Cable

Figure 1 shows the standard cable wiring. This is how the standard ICM-ETHi unit is delivered.

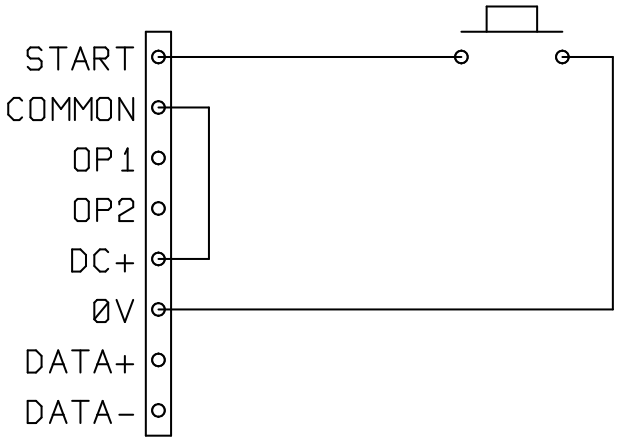

Figure 2 External Start

Figure 2 shows how to connect an external start button (or PLC output relay).

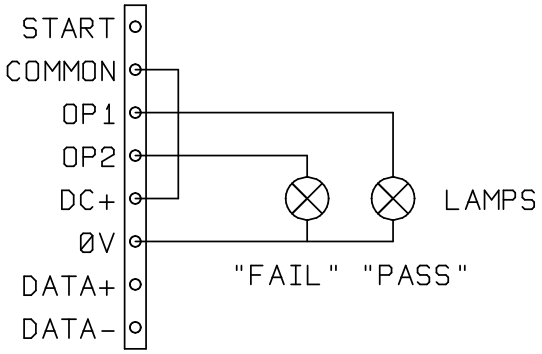

Figure 3 External Indicators

Figure 3 shows how to connect external indicator lamps (in case the built-in LED is not sufficient). These could also be PLC inputs.

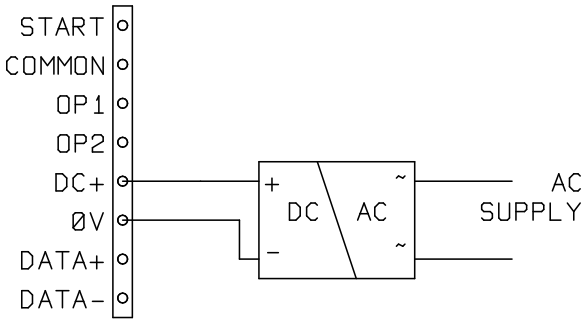

Figure 4 External Power Supply

Figure 4 shows how to connect an external power supply. This arrangement may be preferred for permanent installations over the removable ``plug-top'' power supply that comes with the unit.

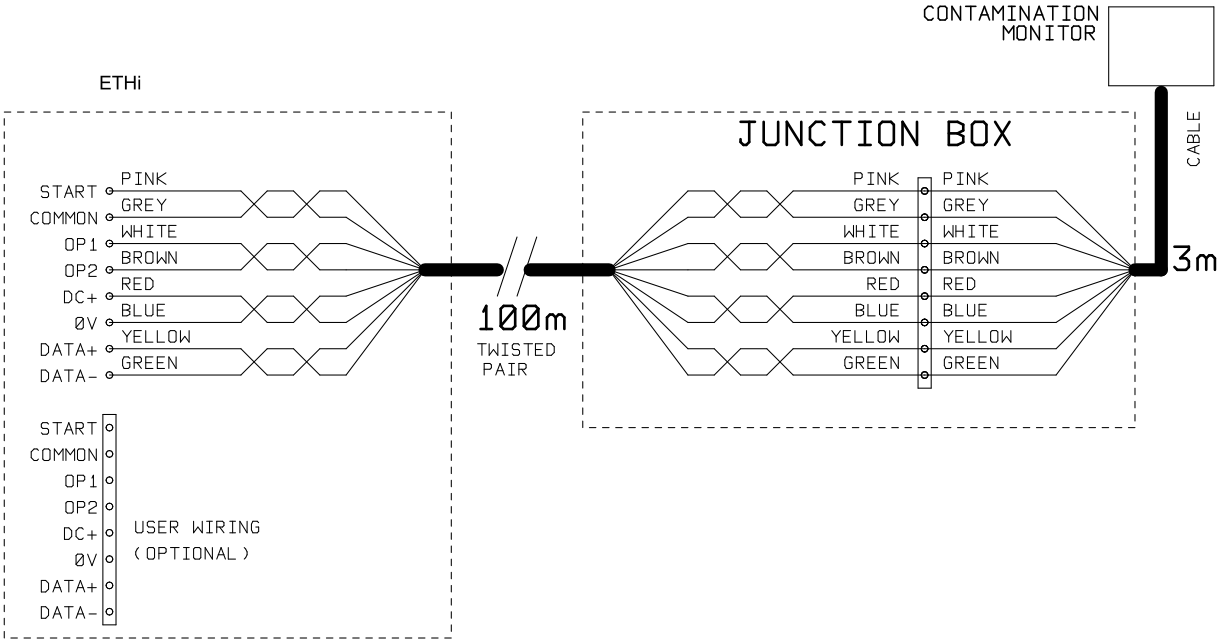

Figure 5 Control Cable Extension

The standard cable is 3m in length. Wiring over longer distances should be done using twisted pair cabling (assuming the serial communications signals are being used). Figure 5 shows an example.

Produced by MP Filtri UK

Revision 0.4

As a policy of continual improvement, MP Filtri UK reserve the right to alter specifications without prior notice.

Except as permitted by such licence, no part of this publication may be reproduced, stored in retrieval system or transmitted, in any form or any means, electronic, mechanical, recording, or otherwise, without prior written permission of MP Filtri UK.

MP FILTRI UK Limited,
Bourton Industrial Park,
Bourton-on-the-Water,
GL54 2HQ, U.K.

Tel: +44.1451-822522
Fax: +44.1451-822282
Email: sales@mpfiltri.co.uk
Website: www.mpfiltri.co.uk

www.mpfiltri.co.uk

ITALY - HEADQUARTERS
MP FILTRI S.p.A.
Tel: +39.02/95703.1
Fax: +39.02/95741497-95740188
Email: sales@mpfiltri.com
Website: www.mpfiltri.com

CANADA
MP FILTRI CANADA INC.
Tel: +1.905-303-1369
Fax: +1.905-303-7256
Email: mail@mpfiltricanada.com
Website: www.mpfiltricanada.com

CHINA
MP FILTRI (Shanghai) Co Ltd
Tel: +86.21-58919916
Fax: + 86.21-58919667
Email: sales@mpfiltrishanghai.com
Website: www.mpfiltrichina.com

GERMANY
MP FILTRI D GmbH
Tel: +49.6894-95652-0
Fax: + 49.6894-95652-20
Email: service@mpfiltri.de
Website: www.mpfiltri.de

FRANCE
MP FILTRI FRANCE
Tel: +33.1.40-86-47-00
Fax: +33.1-40-86-47-09
Email: contact@mpfiltrifrance.com
Website: www.mpfiltri.com

INDIA
MP FILTRI INDIA
Tel: +91 9945599899
Email: s.mishra@mpfiltri.com
Website: www.mpfiltri.com

RUSSIAN FEDERATION
MP FILTRI RUSSIA INC
Phone mobile: +7.095-502-5411
Fax: +7.095-205-9410
Email: mpfiltrirussia@yahoo.com
Website: www.mpfiltri.ru

USA
MP FILTRI USA Inc.
Tel: +1.215-529-1300
Fax: +1.215-529-1902
Email: sales@mpfiltriusa.com
Website: www.mpfiltriusa.com

UAE
MP FILTRI UEA
Tel: +91 9945599899
Email: s.mishra@mpfiltri.com
Website: www.mpfiltri.com